



Maintenance

- 1. Remove grating by depressing release arm and rotating grating anti-clockwise.
- 2. Remove grating securing bar by unscrewing the 2 off M4 pan head captive screws.
- 3. Remove dip tube by pulling up on central handle.
- 4. Remove bucket by pulling up on centre pin. The drain can now be cleaned/rodded.

Assembly is the reverse of the above procedure.

Important

Do not disturb the vinyl clamp or dismantle the drain further.

DO NOT SCALE THIRD ANGLE PROJECTION			IF IN DOUBT ASK!					<u> </u>	©2006
ISS. No.				M.S	04.07.06	TITLE	MAINTENIANO	E CHIDELINES EOD	
C.N. No.							MAINTENANCE GUIDELINES FOR GV6007/ GV5007 GULLY		
DATE									
WADE INTERNATIONAL LTD. THIRD AVENUE, HALSTEAD, ESSEX, CO9 2SX. TEL: 01787 475151 FAX: 01787 475579 e-mail: tech@wade.eu website: www.wade.eu		50910035			SCALE NTS	DRG. No.	ISTAL 35	ISS. No.	